

FIRMWARE UPDATE PROCEDURE

10 November 2019

We strongly recommend to update the firmware periodically. This will preserve optimal performance of the platform and lifetime. The firmware version is presented at the upper right corner of the dashboard.

To update the firmware, please follow the following procedure:

- Connect the system to an open Internet connection (without firewall; the connection should pass the TFTP protocol).
- Switch on the system, while pressing the dashboard button. The dashboard LED will shine red.
- Wait several minutes before the LED starts flashing red.
- Wait until the system restarts. If the LED flashes red color at the beginning of the restart, the firmware has been updated successfully.